


Headlights

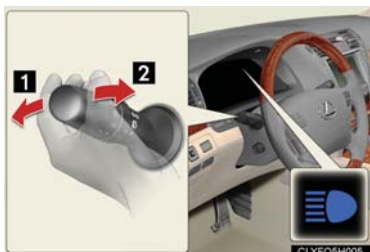

- 1 The instrument panel, side marker, parking, tail and license plate lights turn on.
- 2 The headlights and all lights listed above turn on.
- 3 The instrument panel, headlights and other exterior lights turn on/off automatically in accordance with ambient light levels.

- 1 To engage the high beams, push the lever away from you.
- 2 To flash the high beams temporarily, pull the lever toward you.

n AFS (Adaptive Front-lighting System)

AFS improves visibility at intersections and on curves by automatically adjusting the direction of the light axis of the headlights according to vehicle speed and the degree of the tire angle that are controlled by steering input.



To cancel the system, press the "AFS OFF" button. The indicator comes on when the system is off.

Press the button again to reactivate the AFS.

Fog Lights



The fog lights can be used only when the headlights (low beam) are on.

Hybrid System

Entering and
Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and
Closing


What to do if ...

Customizing
Your Lexus


Windshield Wipers and Washer



- 1 Automatic operation
- 2 Low speed
- 3 High speed
- 4 Temporary operation

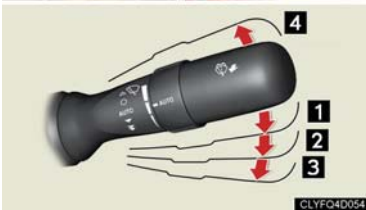

Sensitivity can be adjusted by turning the band.

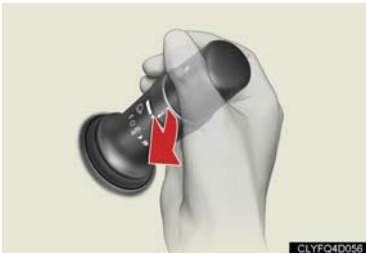

To spray washer fluid, pull the lever. The wipers will operate automatically.

Headlight Cleaner



The headlight cleaner can be used only when the "POWER" switch is in ON mode and the headlights are on.

Rear Window and Outside Rear View Mirror Defoggers



To defog the rear window and the outside rear view mirrors, press the button.

Press again to cancel.

The system turns off automatically after 15 minutes.

Instrument Panel Light Control



1 To dim: press “∨”.

2 To brighten: press “∧”.